




## **2020+ L5P Duramax Rear Differential Cover**


Covers installation of PN: WCF100114

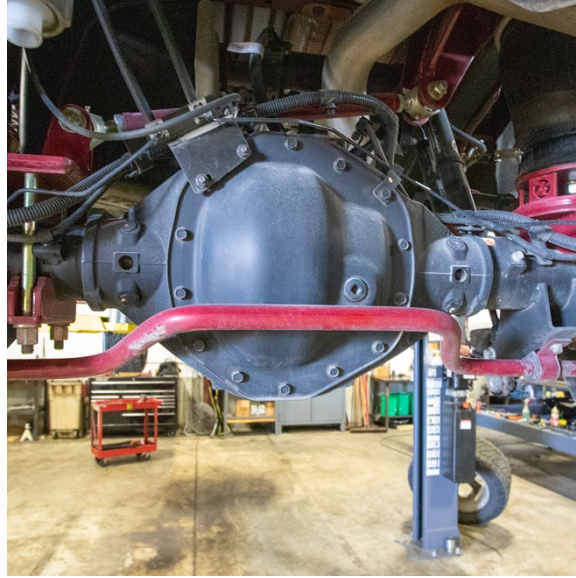

1. This differential cover will require additional fluid. We recommend replacing with new fluid.
2. Drain the differential using the drain plug on the bottom of the differential.



3. Remove the brake line brackets and push them up out of the way on top of the differential. The hardware will be reused for install of bracket.

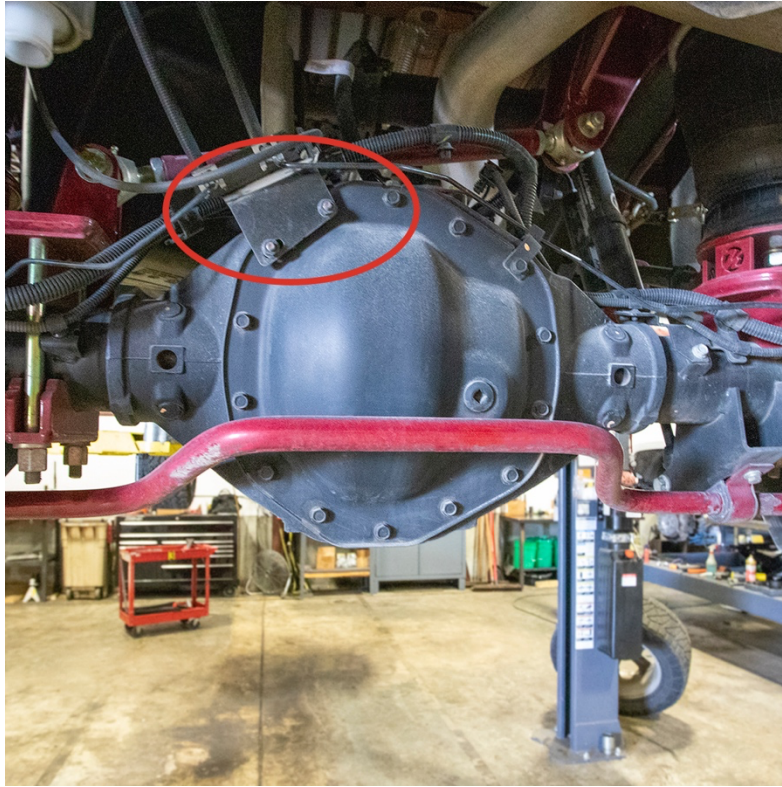

4. Remove all the bolts holding the cover on and then remove the cover.
5. Save the factory reusable gasket. Discard the old differential cover.
6. Clean the gasket and the mounting surface. Inspect the gasket for any damage.
7. Install the new cover and the factory reusable gasket using the supplied bolts with washers. Factory hardware is used on brake line bracket holes only.



8. Start all bolts by hand and do not tighten until all of them are installed. Once all are started, tighten down the bolts in a criss-cross pattern. Be sure to reinstall the brake line brackets using the original bolts in the same location as factory.
9. Torque the bolts to 24 Ft/Lbs.
10. Fill the differential to the fill hole or slightly below and then install the plug with a 5/8 Allen key.



Any Questions, Comments, or Feedback?

Reach us by Email- [Sales@wcfab.com](mailto:Sales@wcfab.com)

Or the shop phone- 630-277-8239

Thank you for purchasing from Wehrli Custom Fabrication!