



2019+ Honda Talon X/R Front Bumper

Covers installation of PN: WCF102001, WCF102002



1. Mark and cut side plastic 1" from center of bolt (see photo for reference).






2. Remove two 5 mm Allen - plastic to bumper.



3. 12 mm Allen (6 total) - bumper to frame.

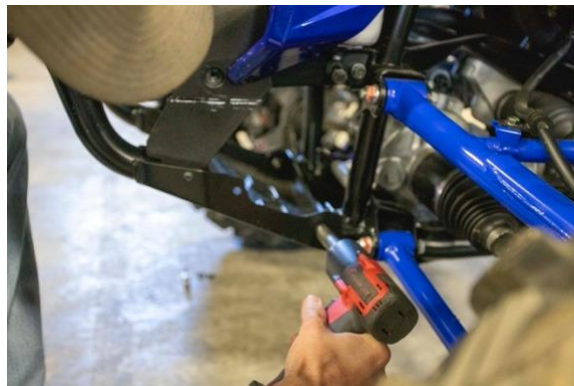

4. Bumper pulls straight out.



5. Use a utility knife or razor blade to clean up the edges of your cuts.

6. Mount lower tabs first.



7. Swing bumper up into place.



8. Minor adjustment of tabs may be necessary.



1. Install Upper Bolts.



2. Crack a beer and admire your work.

Any Questions, Comments, or Feedback?

Reach us by Email- Sales@wcfab.com

Or the shop phone- 630-277-8239

Thank you for purchasing from Wehrli Custom Fabrication!