

2019+ Honda Talon X 4 Lower Door Kit

Covers installation of PN: WCF102028



Front Door Install

1. On the inside of the door, remove eight Phillips screws to remove the factory door skin.



2. Drill four 1/4" horizontal holes into the pre-existing factory markings.



3. From the inside, insert two 1.5" long bolts with washers into the two holes towards the front of the door. Insert two 7/8" bolts with washers into two holes towards the back of the door. Make sure the door is pushed up tight.
4. Use the new lower door as a template to drill 3 vertical holes.



5. Insert 7/8" bolts in remaining 3 holes. Check all washers, nuts and bolts are in and tighten.



6. Reinstall the door skin.



Back Door Install

7. On the back doors, remove eight Phillips screws to remove the factory door skin.



8. Drill four 1/4" horizontal holes into the pre-existing factory markings.




9. From the inside, insert two 1.5" long bolts with washers into the two holes towards the front of the door. Insert two 7/8" bolts with washers into two holes towards the back of the door. Make sure the door is pushed up tight.



10. Use the new lower door as a template to drill 3 vertical holes.



11. Insert 7/8" bolts in the remaining 3 holes. Check all washers, nuts and bolts are in and tighten.

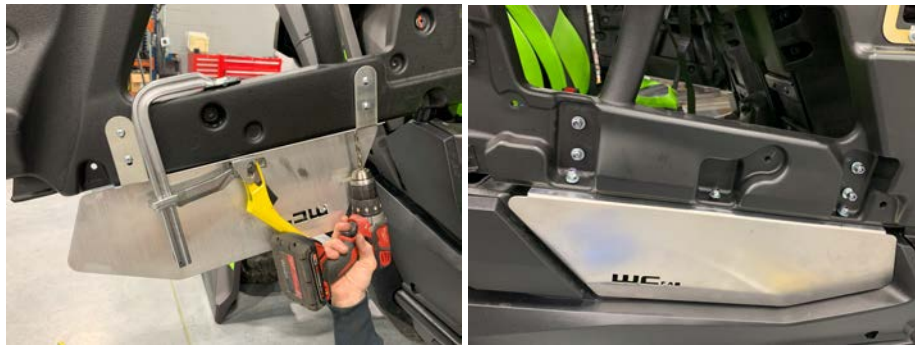

12. Reinstall the door skin.



Any Questions, Comments, or Feedback?

Reach us by Email- Sales@wcfab.com

Or the shop phone- 630-277-8239

Thank you for purchasing from Wehrli Custom Fabrication!