



2011-2016 LML DURAMAX 4" INTAKE KIT WITH AIR BOX

Covers installation of PN: WCF100194

(Before any installation of parts please verify you have received all parts on your packing list)



1. Disconnect Batteries (Negative terminals on both).
2. Remove the airbox lid & tube.




3. Remove air box base.



4. Remove plate for air box.



5. Install new air box using factory hardware.

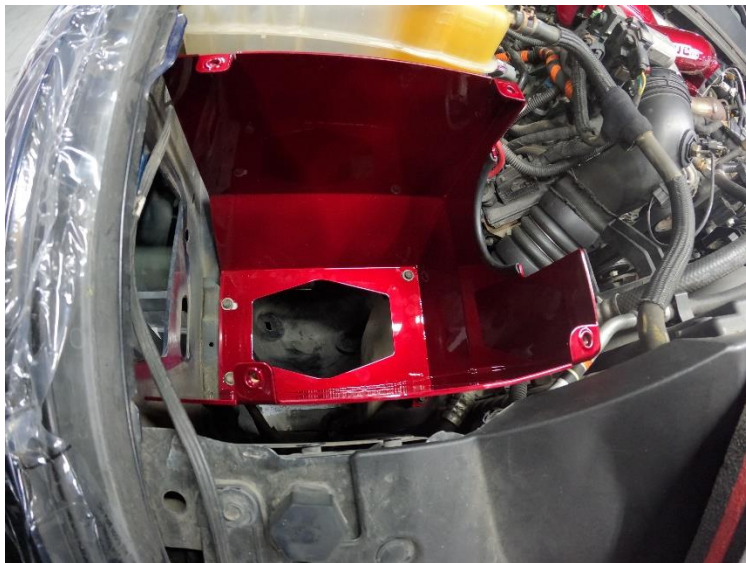

6. Install boot & clamp onto intake horn.



7. Transfer MAF and humidity sensor (if equipped with one) into WCFab Intake Pipe and make sure sensor is closest to the intake horn or it may throw codes due to air flow in wrong direction. If you don't have a humidity sensor, use supplied block off plate.



8. Place air filter in box & install pipe into boot first & air filter second before tightening clamps down. Once clamps are tight, plug in the MAF & CAC Temp Sensors.



9. Install lid & hand tighten the screws.



10. Reconnect batteries, start the engine and check for any leaks throughout new piping.

11. Test drive and verify proper operation.

Any Questions, Comments, or Feedback?

Reach us by Email- Sales@wcfab.com

Or the shop phone- 630-277-8239

Thank you for purchasing from Wehrli Custom Fabrication!