



2017-2024 6.7L Power Stroke Brake Master Cylinder Cover

Covers installation of PN: WCF100198



1. Remove Factory wiring harness retainer.



2. Install both included clip nuts on plastic tabs on driver side of brake reservoir.



3. Remove reservoir cap.




4. Slide cover into place.



5. Reinstall cap.



6. Install supplied hardware (Qty 2: M6-1 X 16mm Screws) and tighten in place.

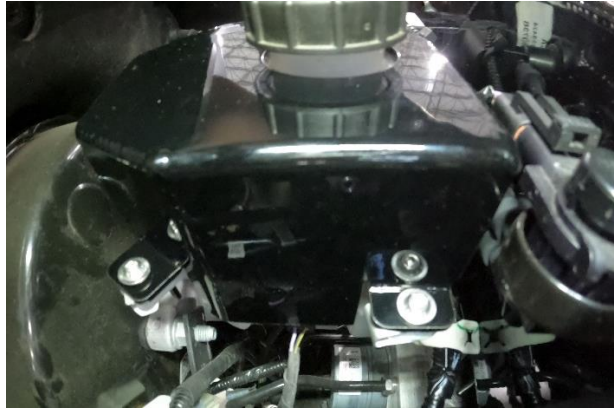

Any Questions, Comments, or Feedback?

Reach us by Email- Sales@wcfab.com

Or the shop phone- 630-277-8239

Thank you for purchasing from Wehrli Custom Fabrication!